

Lexicon 480L Set-Up

The 480-L is delivered to you aligned for +4dBm=0VU on input display, output=+6VU.

If you want to CHANGE THE machine CONFIGURATION:

Push **ctrl** or **param**.

Push the 2nd button from left on bottom under led's indicating CFG.

Move 2nd slider, top display will read CONFIG & SINGLE, MONO SPLIT, STEREO SPLIT, then CASCADE. Leave slider at configuration wanted, then push **ctrl** or **param** again.

To select machine 1A or 1b:

Push **mach** or **tape**, center display will flash MACHINE 1A or MACHINE 1B. The machine name displayed is the machine you are programming. If the display only flashes MACHINE 1A, see TO SPLIT THE 480-L INTO TWO MACHINES: ABOVE.

To enter programs:

Select the machine 1A or 1B (above) to program

Push **bank** several times to select the type of program you want (SAMPLING, ROOMS, HALLS, PLATES, etc.)

Push **program** several times find the program you want. When you find the program you want, push the number of that program (flashing PGM #) on the numeric keypad.

*If you know the bank number and program number of the program you want, you may push - - **bank #, program #***

NOTE:

If you have no input, check to see if the input is switched to analog or digital by pushing **ctrl** or **param**, then pushing the lower right button under "INP" led display. If input setting is not correct, move slider above button to change setting. Then push **ctrl** or **param** again.