


QUICK SETUP GUIDE

1092A, 1094A

Subwoofer positioning

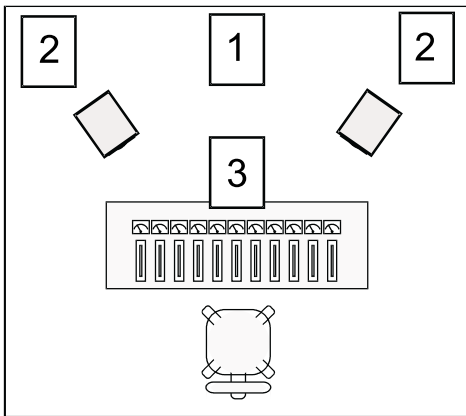

Bass Roll-Off:

Pos 1: -2 dB

Pos 2: -6 dB



Pos 3: 0 dB

Input sensitivity:


Note: Position 2 should only be used with two subwoofers (stereo)

Note: Position 3 may cause cancellation problems. Try position 1 instead.

Distance from front wall

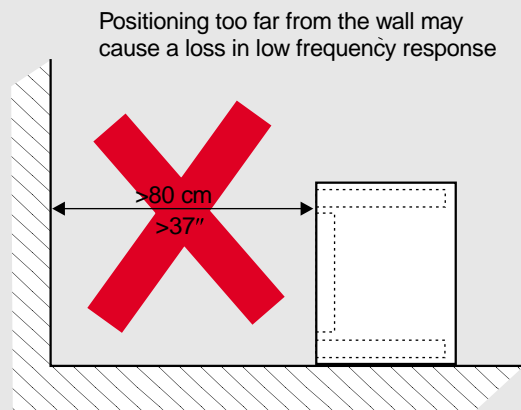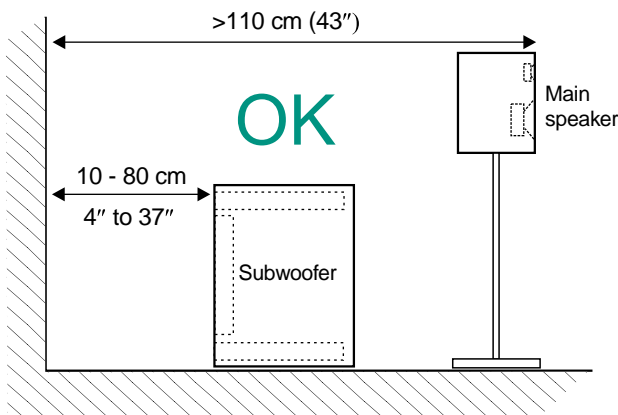


Aligning the radiation ports

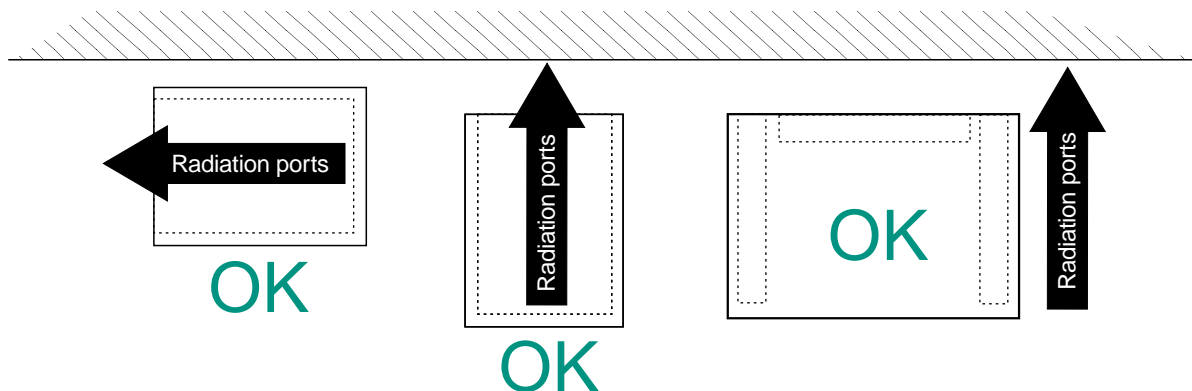


Place the subwoofer so that the radiation ports are close to a wall. The subwoofer can also be placed on its side.

QUICK SETUP GUIDE

Connection to an analogue Matrix Surround Sound processor

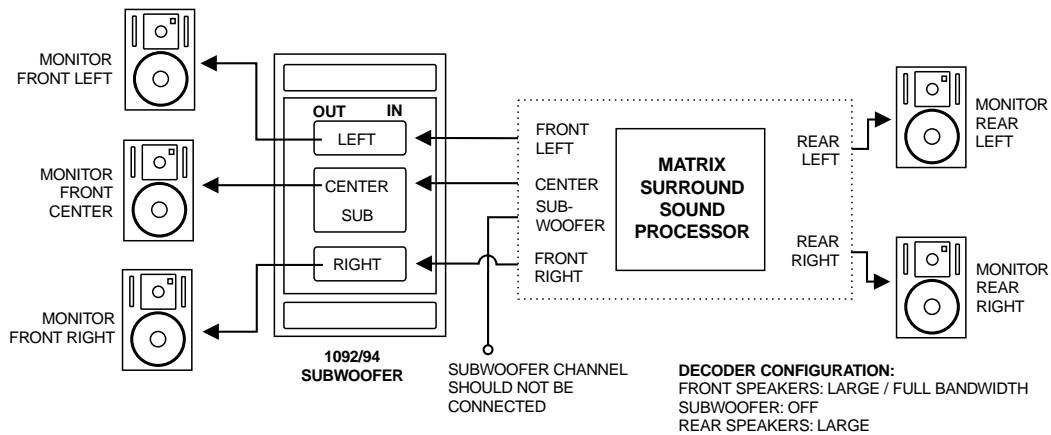

Connection to a digital Discrete 5.1 Surround Sound processor

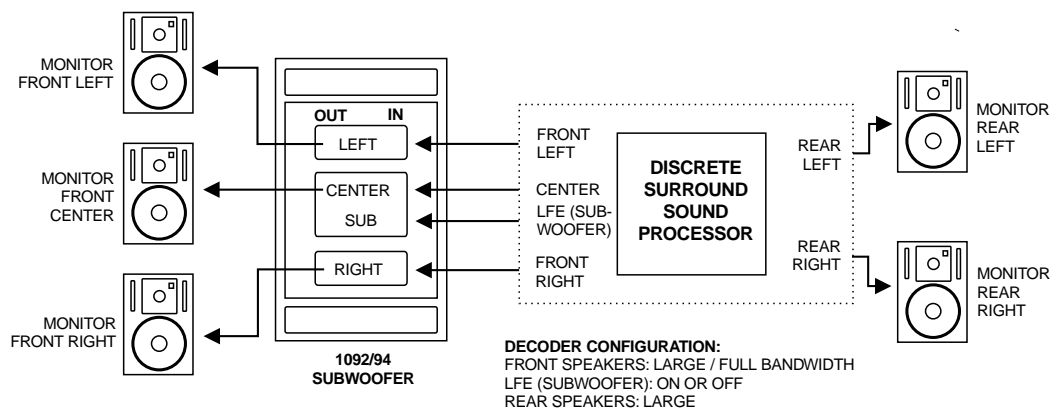


Phase alignment


1. Place the subwoofer and main speakers in their desired positions

2. Feed an 85 Hz test signal into one of the subwoofer's inputs

3. Toggle subwoofer's dip switch 3 "on" and "off" and set it to the position which gives the lowest sound level at the listening position

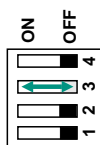

4. Toggle subwoofer's dip switch 4 "on" and "off" and set it to the position which gives the lowest sound level at the listening position

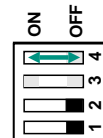

5. Set dip switch 3 to the opposite setting

